


How to assemble the kit

1) Solder the PLCC sockets 44 and 32
 Pay special attention for oriented socket,
 (view pictures).

2) Solder the SMD capacitors
 no polarity for the capacitor

3) install the EEPROM and CPLD in the socket

Kit contents :

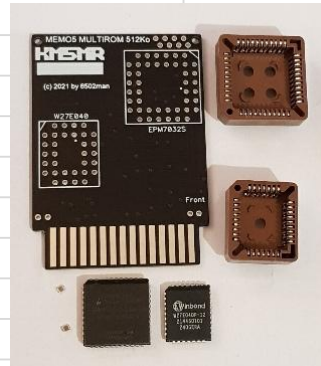

Final assembly and oriented parts :

